

280X PRO

CHECK OUT THE FULL ONLINE MANUAL HERE!



PLEASE SUPPORT US WITH A REVIEW, AND RECEIVE FREE DOGTRA SWAG!



12%
Slimmer
than 280X

CUSTOMIZABLE BUTTON CONFIGURATIONS



Step 1

Set the stimulation level to 0, then press the 2 top side buttons together. Hold for 5 seconds until the red LED turns on and the standby LED blinks green.



Step 2

Move the toggle to select a layout, then press the front center button to confirm.



PRO MODE



STANDARD MODE



2-DOG MODE



Step 3

Use the tool to replace the shield according to the mode

 


PRO MODE

Direct Function Control:

Each function has its own button:
Separate Nick and Constant buttons


* Default mode out of the box

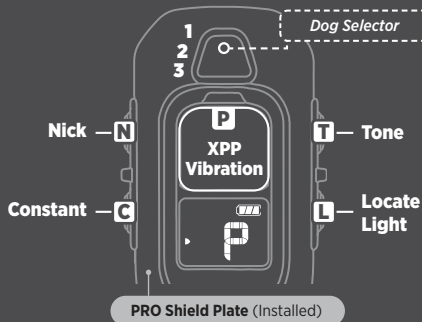

STANDARD MODE

Customizable Control:

 
Main Button: Nick or Constant stimulation
Boosted Constant: Quick level increase as assigned

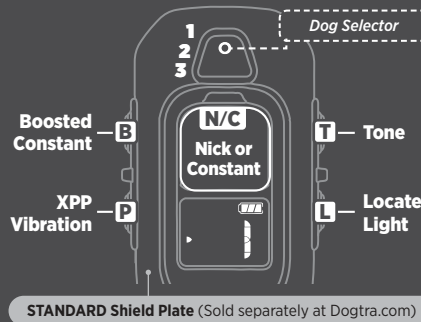

2-DOG MODE

2-Dog Control:

 Top buttons control **Dog-1**.
Bottom buttons control **Dog-2**.
No toggle switching needed.

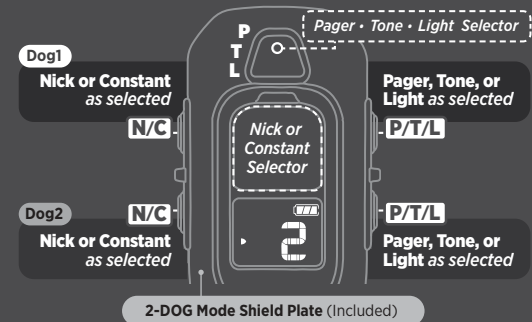

MULTI DOG EXPANDABILITY



Up to 3-dogs



Up to 2-dogs

TOGGLE LOCK

YES Toggle Locks to Dog-1, regardless of the toggle position

NO Toggle serves as function selector

BOOSTED CONSTANT

NO

YES

NO

HERE IS OUR CHECKLIST FOR YOU TO START

Always double-check your battery life and connection of the unit



Pass the strap through the left, center, and right loops according to the direction of the arrow and fasten it



The best position is on either side of the dog's neck. Ensure a snug fit making skin contact



Ensure your dog understands commands, and use positive reinforcement when training with the e-collar.



Do not attach a leash to the E-Collar strap



TURNING THE UNIT ON/OFF

 
The remote transmitter's power button is located on the bottom right. The receiver's collar power button is located between the contacts. Press and hold the power button for 2 seconds to turn it on or off. The LED indicator will turn solid green with a tone when the unit powers on and a red light with a tone when it powers off. (Press the power button briefly to turn on the backlight.)

● Green Full charge ● Amber Medium charge ● Red Needs charge



'1-DOG SETTING' TOGGLE LOCK *Not in 2-DOG MODE

1. Set the stimulation level to 0, and press and hold **ALL 4 side buttons simultaneously**.
2. Hold the buttons until **LED turns red**. After 5 seconds, the on-screen number disappears, indicating the change is complete.
3. In this set up, it will **control Dog-1 only regardless of the toggle position**. Dog-2 or Dog-3 receivers won't respond in this mode.
4. **To unlock**, repeat the above steps while in Lock mode.

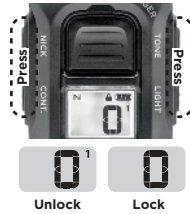


HOW TO ADD ADDITIONAL RECEIVER DEVICES

Pairing starts with the receiver off. Hold the power button for 5 seconds until the LED blinks, then release.



PRO & STANDARD MODE

 1. Set the stimulation level to 0
2. Select the desired Dog using the toggle switch
3. Press the top left button and the front button simultaneously

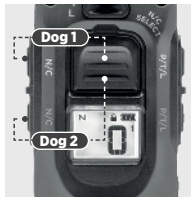

2-DOG MODE

1. Set the stimulation level to 0
 2. Use the left side button to select the dog.
- Dog 1:** Top left+front Press simultaneously
Dog 2: Bottom left+front Press simultaneously

SAFETY STIMULATION LEVEL LOCK

To prevent the stimulation level from changing unintentionally, press down the top of the Rheostat dial for more than 2 seconds to lock it. When locked, a lock icon will appear on the LCD screen. To unlock, press down the top of the Rheostat dial for more than 2 seconds.



Stimulation level lock indicator

IMPORTANT SAFETY AND PRODUCT INFORMATION

WARNING

Please read all safety and product information below before using your Dogtra product. Failure to follow these safety instructions could result in injury to you, your dog and others, or it could result in damage to your Dogtra product or other property.

PRODUCT SAFETY

Training Methods

Dogtra products may be used with a variety of training methods. However, each dog may have a different reaction to training methods and to Dogtra products. Closely observe your dog when determining the right training method to use with your Dogtra product.

Aggressive Dogs

Do not use Dogtra products with aggressive dogs as such dogs may react adversely and cause injury to people or other dogs. Seek the

assistance of a dog-training specialist or veterinarian when dealing with aggressive dogs.

Children

Dogtra products are not toys. Adult supervision and close attention are necessary when Dogtra products are used by or near children.

PRODUCT DAMAGE

Electrical Product

Your Dogtra product contains electrical components and batteries. Do not use or keep your product near heat or flammable sources. Such use or storage may damage your product and/or cause fire, explosion, injury, or property damage.

Medical Device Interference

Dogtra products contain electrical and magnetic components that emit low-level electromagnetic waves and radio frequencies. These electromagnetic waves or radio frequencies may interfere with pacemakers, defibrillators, or other medical devices. Consult your

FUNCTION TYPE DESCRIPTIONS

• Nick/Constant

Triggered stimulation, delivered either as a single pulse (Nick) or as continuous output for up to 12 seconds (Constant).



How to switch functions in 2-DOG MODE

Press for 3 sec. Switches stimulation mode for both dogs on side buttons between N and C



How to switch functions in STANDARD MODE

Set the stimulation level to 0, then press and hold both the main front button and the side power button simultaneously for 5 seconds to program Nick or Constant mode. The selected mode will appear at the top of the LCD screen.

• Pager

Provides a non-stimulating vibration for up to 12 seconds.

• Tone

Emits a beeper tone without applying stimulation for up to 12 seconds.

• LED Locate Light

Uses a 1000 lux LED Light on the receiver to locate your dog in the dark.

- For continuous blinking, every 4 seconds, tap the Locate Light button once. To disable the continuous blinking, tap the Locate Light button again.

- To manually enable the continuous blinking, press and hold the Locate Light button which can stay blinking for up to 12 seconds.

• Toggle Switch

PRO & STANDARD MODE Dog select



Select between paired receivers to train multiple dogs. 'Toggle Lock' available to prevent switches

2-DOG MODE Function Select



Changes function of the right buttons for both dogs (Pager / Tone / LED)

*No toggle lock for 2 dog mode

• Boosted Constant *STANDARD MODE ONLY

Boosted Constant button customizes your desired immediate level jump without having to manually increase the level, which can be applied up to 12 seconds. To set up, please follow the below steps:

1. Set the stimulation level to 0.
2. Hold the Boosted Constant button until the LED light on the transmitter is blinking.
3. Use the rheostat dial to select the Incremental Boosted Stimulation level to jump.
4. Press the Boosted Constant button again to complete the setup.

① Boost Example

Selecting "5" as the Incremental Amount for the Boosted Constant button will apply the output level of displayed level + 5, as shown below.

Base Displayed Level	1	5
Incremental Amount	+5	+5
Boosted Constant Output	6	10

Applies Displayed Base Level. In this case, level 5 'Nick' will apply.



Applies 'Boosted Constant' for up to 12 seconds. In this case, level 10 'Constant' will apply.



physician or medical device maker before using your medical device around a Dogtra product. If you think that your Dogtra product is interfering with your pacemaker, defibrillator, or other medical device, stop using the Dogtra product.

Inadvertent Activation

The digital microprocessor offers thousands of unique codes to eliminate frequency match-up with other Dogtra e-collars. The Constant button will automatically shut down after being held down for 12 seconds or more as a safety feature.

UNAUTHORIZED USE

Your Dogtra product should be used only in a humane manner to train and educate your dog. Dogtra products are not intended for use in any other manner nor are they intended for use with other animals or with humans.

BATTERY

Your Dogtra product contains batteries. Take care when removing

and installing batteries as your fingers may get caught. Dispose of batteries as provided by your local regulations. Do not disassemble, crush, heat, or otherwise alter the battery as it may cause fire, injury or property damage.

FCC WARNING STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.